




WIRE MANAGEMENT

FLEX TUBING

ITEM #	COLOR	DIAMETER Inches	LENGTH Feet	BAG QTY	CASE QTY Total Bags
WM12878	Black	3/8	7	1+7 zipits™	120
WM12879	Black	1/2	7	1+7 zipits™	120
WM13777	Black	3/8	5	1	12
WM13779	Black	3/4	3	1	12

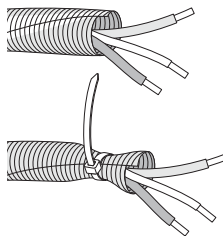

Instructions:

1. Cut tubing to desired length
2. Gently pry tubing over completed wiring job
3. Snaps shut to form a continuous protective cover

Fasten a zipit around the tubing for an even more secure hold.

**premium.
industrial.
products.**